



KERN & Sohn GmbH

Ziegelei 1

D-72336 Balingen

E-mail: info@kern-sohn.com

Tel: +49-[0]7433- 9933-0

Fax: +49-[0]7433-9933-149

Internet: www.kern-sohn.com

Printer configuration

KERN YKT-01

Version 1.3

2025-12

GB



TYKT-01-A-ZB_KFG-e-2513

KERN YKT-01

Please refer to the operating instructions supplied with the printer for the relevant printer settings.



KERN YKT-01

Printer settings and scale settings must match for proper data transfer.
The required interface cable must be purchased separately.

Standard printer settings

Interface	RS232
Baud rate	9600
Data bit	8 bit
Stop bit	1 bit
Parity	None
Handshaking	RTS/CTS

Model series	Type scale series	Interface cable	Comment
PFB; EWJ	TPFB-B; TEWJ-B	CFS-A01	Scale: SGLPrt must be selected
EMB-V ; PCD ; 440 ; DE	EMB-V; PCD; 440; DE-D/A	572-926	
PCB; PCJ; FCB; FKB; CKE; IFC; BFC; UFC; NFC; KFC; DS; CDS; PKS; PKJ; 572	TPCB-A/TPCJ-A; TFCB-A/-B; TFKB-B, TCKE-B; TCKE-A (small); TIFC-C; TBFC-C; TUFC-C; TNFC-C; TKFC-TM-C; TDS-A; TCDS-A; TPKS/TPKJ-A; T572-A	KUP-01	Scale: SGLPrt must be selected
IXC; SXC; BXC; UXC; NXC; KXC	TIXC-A; TSXC-A; TBXC-A; TUXC-A; TNXC-A; TKXC-TM-A	KUM-01	Install interface: KUM-01; Scale: SGLPrt must be selected
ALS; ALJ; PLS; PLJ	TALSG/TALJG-A; TPLSG/TPLJG-A	572-926	
PNS; PNJ	PNS; PNJ	MLB-A05	Printer: for PNS Data Filter: Set S Printer: for PNJ Data Filter: Set /,S
EW; EG	EW-N; EG-AM	474-926	Printer: for EW Data Filter: Set S Printer: for EG Data Filter: Set /,S
PWS	TPWS-A	MLB-A05/PWS-A02	Printer: Data Filter: Set S
PBS; PBJ	PBS; PBJ-N; TPBS-B; TPBJ-B	770-926	
PES; PEJ	TPES/TPEJ-B	474-926/MLB-A05	Printer: for PES Data Filter: Set S Printer: for PEJ Data Filter: Set /,S
FES; FEJ	TFES/TFEJ-A	MLB-A05	
ADB; ADJ	ADB-A; TADB-B; TADJ-A/-B	MLB-A05	
AXS; AXE	TAXS-A/TAXE-A	MLB-A05	
ADS; ADT; PDS; PDT	TADS-A/TADT-A; TPDS-A/TPDT-A	572-926	
ACS; ACJ	TACS-A/TACJ-A	MLB-A05	
ABT	ABT-NM	770-926	
ABP	TABP-A	MLB-A05	
DBS	DBS	572-926	
DLB	TDLG-A	572-926	
DIS	TDIS-A	MLB-A05	

Model series	Type scale series	Interface cable	Comment
MPS; MWS; MCB	MPS-NM; MWS-NM; MCB-NM	MPS-A08	
MPN ; MWN ; MCN	TMPN-A; TMWN-A; TMCN	KUP-01	Scale: SGLPrt must be selected
MPE; MTA	MPE-NM; TMPE-EM-A; MTA-NM	CFS-A01	
MPC	MPC-NM; MPC-LM	CFS-A01	Install interface: MPC-A01
MWA	MWA-NM	CFS-A01	
CPB	CPB-N/CPB-DM	CFS-A01	
CFS	CFS	CFS-A01	
IFS	IFS/IFS-M	CFS-A01	
CCA	CCA	CFS-A01	
CCS	CCS	CFS-A01	
FCD; CPE; EFC	TFCD-A; TCPE-A; TEFC-A	CFS-A01	
RFC	RFC, TRFC-A	CFS-A01	
SFB; KFN	TSFB-A; KFN-TM	CFS-A01	Install interface: KFN-A01
EOC	EOC	EOC-A12	
IOC; BID; UID; KIB	IOC-M, TIOC-A, BID-M, BID-D, TBID-A, UID-M, UID-DM, KIB-TM	EOC-A12	